



CLAPBOARD & REEL ASSEMBLY INSTRUCTIONS

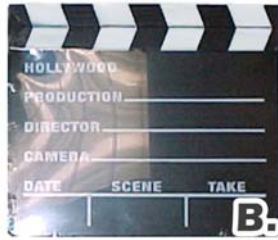

Parts List


A: Film Reel
 B: Small Director's Clapboard
 C: Film Strip (x 10 feet)
 D: Gold "L" Brace
 E: Transparent Tape (NOT INCLUDED)

1.) Unpack and check items A-D. Start your project by centering the film reel as shown. The rivets surrounding the "keyhole" center will make a downward triangle.

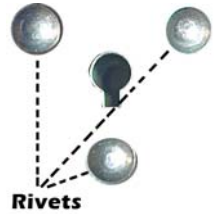

2.) Peel the backing off the Gold "L" Brace to expose the double-stick adhesive.

3.) You must make 1/4" space between the Reel's back rivets and the "L" Brace's Leg -- the Clapboard fits in between. Press the Foot of the Brace firmly on the Film Reel, so that it is centered directly behind the Reel's two back rivets. The **SILVER** side should face you.

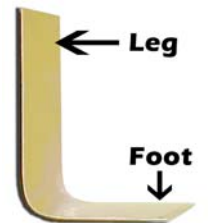

4.) **GO SLOW!!!** Turn the Film Reel around so that the **GOLD** side of the "L" Brace faces you. Line-up the back of the Clapboard with the Brace so that the Clapboard is centered. Gently press the Leg of the Brace and the clapboard together so that they adhere.


5.) Secure the "L" Brace's connections by pressing firmly at each point. *Optionally, secure the Brace's connection to the Reel by wrapping a piece of tape around the foot of the Brace and the Underside of the Reel.

6.) Place a piece of tape at the end of the film strip.

7.) Attach the taped film strip to the core of the film reel and begin wrapping the film strip around the core.

8.) Continue wrapping the film strip around the Reel. Before the film strip starts running out, pull the strip up and wrap the film around the Clapboard to cover the Gold "L" Brace.

YOU'RE DONE! USE YOUR ARTISTIC TALENT TO ADD EXTRA CHARACTER... TRY WRITING ON THE FACE OF THE CLAPBOARD AND THE BACK WITH CHALK OR A "WHITE-OUT" PEN.

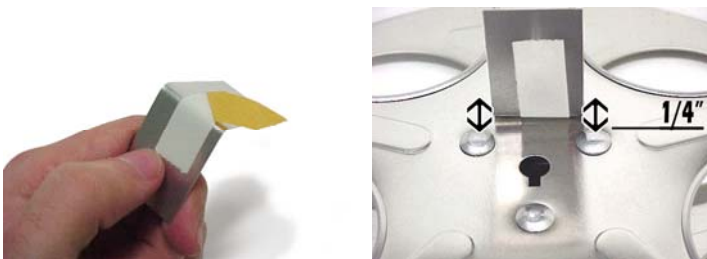

*Touching the adhesive will rub off dust and oil from your fingers, reducing its holding strength.

